




**Thomson
Automation**

USB Serial Adapter For LGC

For use with LGC Manager software

Connections: DB9, mini USB

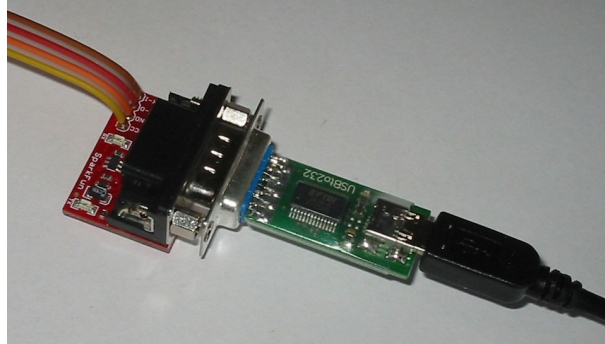

Parallax USB / RS232 Adapter

Connecting

1. Install the Parallax driver on your computer.
2. Plug the USB / RS232 adapter into the LGC Serial adapter as shown in the picture.
3. See LGC manager help for more information on connecting to the Landing Gear Controller.

Specifications

Name	Parallax USB to Serial (RS232) Adapter
Part nr.	1070USB (Parallax 28030)
Supply Voltage	From computer
IO Channels	1
Connection	DB9M – Mini USB
Cable Length	100 cm

The USB / RS232 Adapter is intended for hobby use only. Thomson Automation is not responsible for any damage or injury that occurs through the use of this product.